

AIRS Changes

MARCH 2020



Version Control

Version Number	Date	Changed by
1	5 th March 2020	Nicola Jordan

Table of Contents

Interface Changes	1
Default EPOD Socket Settings	7
Booking Key	8
View Mode	9

Interface Changes

Asset Type	lead - iec	Earth Continuity	0.27 Ohm		Dual
Asset Id	8234FFA20010	Insulation Polarity	100.00 M Ohm	Large	Exist
Building		\cdot		Agenesice togging	sung
Level		•		PH: 1300 287 449	Dual
Room	· •	Asset (Ins= 1) Test Last Test CurrentTest			Figure e
Location	ا	Visual Pars			
Make	•	Date 04 Mar 2020			Dual
Status	Active - Make Repeat	Electrical Test:		Point Of Interest	New IEC
Environment	Non-Hostile ·	Lead			
Time Frame	12 ·		Go		0
Heating element	C Invertor/Generator			Fail	
		Visual Fail :	X		
I-Phase	No	Clear Tags :			-
		Visual Only Pass:		Firmware No : 4	
00	8 🖬 🚯	NEO-A038-T029	Last P	est 9.1 V	

OLD INTERFACE

NEW INTERFACE

Ξ	Back	Save Last Detail New Asset Summary		More
1	Job : 205010	Site : CRM Test School		
FEI	\otimes		Frest Epod PowerBoard	
2	Asset Type	Powerboard		
	Asset ID	8234FCA27656	Aprilona Tagala Sate	
	Building			
1 😨	Level			
NEO	Room	· _		
S *	Location	·	Visual Only Visual Electrical Electrical Clear Last	
Booking Key	Make	- 3 Rep	at Pass Fail Test Delay Test Test	
	Status	Active •	Asset (Ins= 0)	
Complete	Environment	Non-Hostile •	Test Last Test Current Test	
1	Time Frame	12 •	Electrical	
Settings	Heating Flome		NEO-A134-T029 Firmware No : 4	
	Theating Lienne			
Connected			9.1V	3
<u> </u>				
Exit	Clear lags			

CHANGES OF LOCATION

	Back	Save Last Detail New Asset Summary					
	Job : 205010	Job : 205010 Site : CRM Test School					
	\otimes		Tope Epod PowerBoard	Label Type			
م	Asset Type	Powerboard					
FUDE	Asset ID	8234FCA27656		Appliance Tagging Services			
PIKE	Building	•		Ph: 1300 287 669			
	Level	•					
NEO	Room	· · ·					
ଙ୍କ	Location	·	Visual Only Visual Electrical Electrical Clear Last	Print Camera Point Of Interest			
Booking Key	Make	• SRepeat	Pass Fail Test Delay Test Test				
	Status	Active +	Asset (Ins= 0)				
Complete	Environment	Non-Hostile	Test Last Test Current Test	Fail			
	Time Frame		Visual Electrical				
			Date	NEO 4124 T020			
Settings	Heating Eleme	nt Invertor/Generator		Firmware No : 4			
				911/			
Connected				93V			
	Clear Tags						
Exit							





Row of buttons

Moved from the bottom of the screen to the top.





Next Asset Id

Down arrow replaced by a double arrow icon in the top left corner.





Click on the arrow to expand.

Now called 'Next Asset ID'.





Test Type

'Tests' button moved from the bottom of the screen.

Test type display moved from the middle of the screen.



Both now at the top of the screen.

Click in the 'Text' box to change the test type.



Test Type screen has also been updated:

Back				Clear			
Available test type							
\square							
C							
C							
C							
C							
\square							
			RCD Push/ Manual Trip				
C) MLT						



'More' button

Moved from the bottom row of buttons to the top right corner.





Click to expand:





EPOD type

Moved from the bottom left of the screen to the right-hand side.





Clear Tags

Moved from the middle of the screen to the bottom left corner.





'Go' button

Moved from the middle of the screen to the bottom right.





Delete Asset Button

The functionality to delete the current assets has been moved to the asset image to bring the look and fell up to date with app standards.



Is now represented by a cross on the corner of the asset image.



Default EPOD Socket Settings

It is possible to set a default EPOD socket type in Settings.



Booking Key

When opening a job in AIRS, a Booking Key is now required.

This is generated in the booking in Field Service once the safety checklist has been completed.

Refer to the 'M365 Field Service Changes 2020_03' document for more details.



Enter the Booking Key into AIRS and continue testing as normal.

Once entered in one of the AIRS apps, it can be opened in any of the apps on that day.

A Booking Key is required **per booking per day**.

View Mode

It is only possible to get the booking code on the day of the booking.

Therefore to see the details of an upcoming job in AIRS before the day, use the 'View only' option.

This has limited functionality and lots of buttons are disabled.

