

Set the Gap Sensor

The gap sensor needs to be set each time a new printer roll is installed.

1. Hold 'Pause' whilst turning the power on.



2. The labels feed out of the printer. Wait for the feed to stop.
3. Switch the printer off and on again.
4. The gap has now been set.
5. Wind back the labels to avoid wastage.